



## A. 圆头螺丝M6-14 X 4

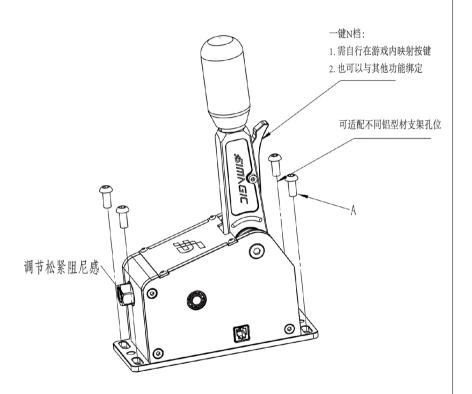

# ₱ B.圆头螺丝M6-8 X 4

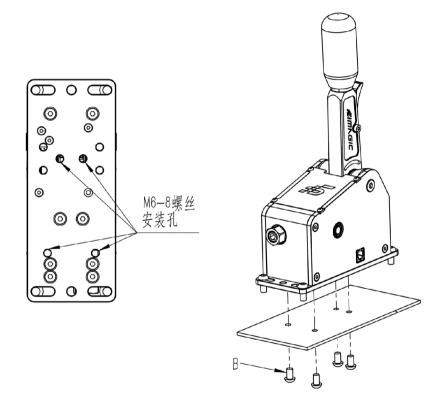


#### 注意:

尝试安装固定Q18序列档时,请使用自带的 M6-8螺丝。 请勿使用长度超过8毫米的螺丝,以免挤压内部电路板,导致产品的不可逆损伤






### A. Round edge screw (M6-14 x4)

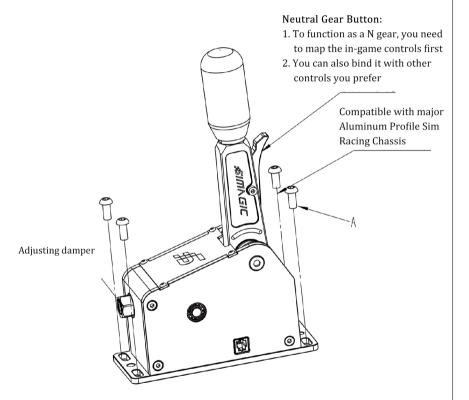



### B. Round edge screw (M6-8 x4)

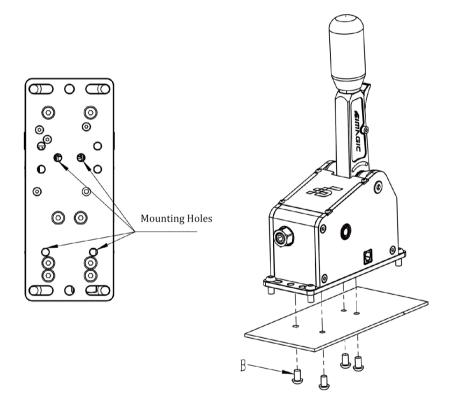

#### Attention:

When mounting your Q1s Sequential Shifter, Please always use the M6-8 bolts included in the package. Using bolts longer than 8 mm will crush and break the PCB (Printed Circuit Board) inside.